

## Technical Datasheet

# PENOSIL Premium Foam Cleaner

PENOSIL Premium Foam Cleaner is used for removing uncured foam from clothes, window frames, foam gun etc. 500 and 340 ml cans. PENOSIL Premium Foam Cleaner is designed specially for cleaning foam gun. When using cleaner, press the trigger several times in order to clean the sealant and the nozzle. PENOSIL Premium Foam Cleaner has a spray valve for removing polyurethane foam from gun adapter. Propellant gas does not damage ozone layer. Handle propellant with special care as it contains inflammable gas. In order to clean foam gun connect PENOSIL Premium Foam Cleaner to the gun and clean thoroughly. In order to remove foam from clothes and other objects use the pulveriser nozzle on the can. Follow safety regulations when using PENOSIL Premium Foam Cleaner!

### Properties

Solvent: acetone

Propellant: dimethyl ether

### Safety regulations

PENOSIL Premium Foam Cleaner is inflammable. Keep out of reach of children. Use in rooms with good ventilation only and do not smoke. Take precautionary measures against static discharges. Aerosol can must not be stored and used at temperatures over + 50 °C. Do not use near fire.